

POWER PROJECTOR LV-7490

EXPAND SERIAL COMMAND SPECIFICATIONS

Revision 1

- CONTENTS -

1.	Ov	erview8
2.	Sei	rial Interface Specification8
2	2.1	Transfer Specification8
2	2.2	Connection8
3.	No	tes for communication9
4.	Na	me Definition9
5.	Fui	nctional Execution Command Table10
;	5.1	Image Command Table10
,	5.2	PC Adjust Control Command Table10
,	5.3	Input Control Command Table10
,	5.4	Screen Command Table11
,	5.5	Lamp Command Table11
,	5.6	Sound Command Table11
,	5.7	Setting Command Table12
,	5.8	Other Command Table12
6.	Sta	tus Read Command Table13
(6.1	Image Status Read Command Table13
(6.2	PC Adjust Status Read Command Table13
(6.3	Video Status Read Command Table13
(6.4	Input Status Read Command Table13
(6.5	Screen Status Read Command Table14
(6.6	Lamp Status Read Command Table14
(6.7	Sound Status Read Command Table14
(8.6	Setting Status Read Command Table15
(6.9	Other Status Read Command15
7.	Err	or Code Table16
8.	Fui	nctional Execution Command17
8	8.1	Format17
8	8.2	Transfer Example17
8	8.3	Operation Requirements17
8	8.4	Image Command18
	8.4	.1 CF_BRIGHT Command18
	8.4	.2 CF_CONT Command18
	8.4	.3 CF_COLOR Command18
	8.4	.4 CF_TINT Command18
	8.4	.5 CF_SHARP Command19
	8.4	.6 CF_GAMMA Command19

8.4.7	CF_WBAL - Command	20
8.4.8	CF_COLTEMP Command	20
8.4.9	CF_PROGV Command	20
8.4.10	CF_NZRED Command	21
8.4.11	CF_IMAGE Command	21
8.4.12	CF_COLBOARD Command	22
8.4.13	CF_IMAGEADJ Command	22
8.5 PC	Adjust Control Command	23
8.5.1	CF_FSYNC Command	23
8.5.2	CF_TDOTS Command	23
8.5.3	CF_CLAMP Command	23
8.5.4	CF_H – POS Command	24
8.5.5	CF_V – POS Command	24
8.5.6	CF_DDOTS Command	24
8.5.7	CF_DLINE Command	25
8.5.8	CF_PCSTORE Command	25
8.5.9	CF_PCMODEFREE Command	25
8.6 Inp	ut Control Command	26
8.6.1	CF_INPUT Command	26
8.6.2	CF_SOURCE Command	26
8.6.3	CF_INPUT1 Command	27
8.6.4	CF_INPUT2 Command	27
8.6.5	CF_INPUT3 Command	27
8.6.6	CF_INPUT4 Command	27
8.6.7	CF_INPUT_%1_%2 Command	28
8.6.8	CF_SYSTEM Command	29
8.7 Scr	een Control Command	30
8.7.1	CF_SCREEN Command	30
8.7.2	CF_DZCENT Command	30
8.7.3	CF_VSCALE Command	31
8.7.4	CF_VPOS Command	31
8.7.5	CF_HSCALE Command	32
8.7.6	CF_HPOS Command	32
8.7.7	CF_KEYSTONE Command	33
8.7.8	CF_KYSTNMODE Command	33
8.7.9	CF_CEIL Command	33
8.7.10	CF_REAR Command	33
8.8 Lar	np Command	34
8.8.1	CF_LAMPMODE Command	34

8.8	.2	CF_ LAMPLIFECONTRL Command	34
8.9	Sou	nd Command	35
8.9.	.1	CF_VOLUME Command	35
8.9.	.2	CF_MUTE Command	35
8.9.	.3	CF_MIC Command	35
8.9.	4	CF_MICGAIN Command	35
8.9.	.5	CF_STANDBYMICOUT Command	36
8.10	Sett	ting Command	37
8.10	0.1	CF_LANG Command	37
8.10	0.2	CF_MENUPOSITION Command	37
8.10	0.3	CF_INPUTSEARCH Command	38
8.10	0.4	CF_AUTOSETUPPCADJ Command	38
8.10	0.5	CF_AUTOSETUPKEYSTONE Command	38
8.10	0.6	CF_AUTOSETUP Command	38
8.10	0.7	CF_BACKGND Command	39
8.10	8.0	CF_DISP Command	39
8.10	0.9	CF_LOGO Command	40
8.10	0.10	CF_TERMINAL Command	40
8.10	0.11	CF_P-MANE Command	41
8.10	0.12	CF_P-MANETIME Command	41
8.10	0.13	CF_ON-STA Command	41
8.10	0.14	CF_STANDBYMODE Command	41
8.10	0.15	CF_PTIMEMODE Command	42
8.10	0.16	CF_PTIMER Command	42
8.10	0.17	CF_PTIME Command	42
8.10	0.18	CF_CCAPTIONDISP Command	42
8.10	0.19	CF_CCAPTIONCOLOR Command	43
8.10	0.20	CF_RCODE Command	43
8.10	0.21	CF_KEYDIS Command	43
8.10	0.22	CF_PJPINCODE Command	44
8.10	0.23	CF_FANMODE Command	44
8.10	0.24	CF_FANCONTROL Command	44
8.10	0.25	CF_DELAYCTRL Command	45
8.10	0.26	CF_FILTIMER Command	45
8.10	0.27	CF_FILH Command	45
8.10	0.28	CF_TTLPWRSAVE Command	45
8.10	0.29	CF_FDEFAULT Command	45
8.11	Oth	er Command	46
8 1 ²	1 1	CE KEYENII Command	46

	8.11	.2 CF_MENU Command	46
	8.11	.3 CF_POWER Command	46
	8.11	.4 CF_FREEZE Command	47
	8.11	.5 CF_VMUTE Command	47
9.	Stat	us Read Command	48
	9.1	Format	48
	9.2	Transfer Example	48
	9.3	Operation Condition	48
	9.4	Image Status Read Command	49
	9.4.	1 CR_BRIGHT Command	49
	9.4.2	2 CR_CONT Command	49
	9.4.	3 CR_COLOR Command	49
	9.4.	4 CR_TINT Command	49
		CR	49
	9.4.	5 SHARP Command	49
	9.4.0	6 CR_GAMMA Command	50
	9.4.	7 CR_WBAL – R Command	50
	9.4.8	8 CR_WBAL – G Command	50
	9.4.9	9 CR_WBAL – B Command	50
	9.4.	10 CR_COLTEMP Command	51
	9.4.	11 CR_NZRED Command	51
	9.4.	12 CR_PROGV Command	51
	9.4.	13 CR_IMAGE Command	51
	9.4.	14 CR_IMGGMD Command	52
	9.4.	15 CR_COLBOARD Command	52
	9.5	PC Adjust Status Read Command	53
	9.5.	1 CR_FSYNC Command	53
	9.5.2	2 CR_TDOTS Command	53
	9.5.	3 CR_CLAMP Command	53
	9.5.4	4 CR_H – POS Command	53
	9.5.	5 CR_V – POS Command	53
	9.5.0	6 CR_DDOTS Command	54
	9.5.	7 CR_DLINE Command	54
	9.5.8	8 CR_PCSTORE Command	54
	9.6	Video Status Read Command	55
	9.6.	1 CR_SERSYS Command	55
	9.7	Input Status Read Command	56
	9.7.	1 CR_INPUT Command	56
	97	2 CR SOURCE Command	56

9.7.3	CR_SRCINP1 Command	56
9.7.4	CR_SRCINP2 Command	56
9.7.5	CR_SRCINP3 Command	56
9.7.6	CR_SRCINP4 Command	57
9.7.7	CR_SYSTEM Command	57
9.7.8	CR_SYSLIST Command	58
9.7.9	CR_MODELIST Command	58
9.8 Sc	reen Status Read Command	59
9.8.1	CR_SCREEN Command	59
9.8.2	CR_VSCALE Command	59
9.8.3	CR_VPOS Command	59
9.8.4	CR_HSCALE Command	59
9.8.5	CR_HPOS Command	60
9.8.6	CR_ KYSTNMODE Command	60
9.8.7	CR_CEIL Command	60
9.8.8	CR_REAR Command	60
9.9 La	mp Status Read Command	61
9.9.1	CR_LAMPREPL Command	61
9.9.2	CR_LAMPH Command	61
9.9.3	CR_LAMPCORRESPH Command	61
9.9.4	CR_LAMPMODE Command	61
9.9.5	CR_LAMPMSTS Command	62
9.9.6	CR_PROJH Command	62
9.9.7	CR_HMLAMP Command	62
9.9.8	CR_ LAMPLIFECONTRL Command	62
9.10 So	und Status Read Command	63
9.10.1	CR_VOLUME Command	63
9.10.2	CR_MUTE Command	63
9.10.3	CR_MIC Command	63
9.10.4	CR_MICGAIN Command	63
9.10.5	CR_STANDBYMICOUT Command	63
9.11 Se	tting Status Read Command	64
9.11.1	CR_LANG Command	64
9.11.2	CR_INPUTSEARCH Command	64
9.11.3	CR_AUTOSETUPPCADJ Command	64
9.11.4	CR_AUTOSETUPKEYSTONE Command	65
9.11.5	CR_BACKGND Command	65
9.11.6	CR_DISP Command	65
9.11.7	CR LOGO Command	65

9.11.8	CR_TERMINAL Command65
9.11.9	CR_P-MANE Command66
9.11.10	CR_P-MANETIME Command66
9.11.11	CR_ON-STA Command66
9.11.12	CR_STANDBYMODE Command66
9.11.13	CR_PTIMEMODE Command66
9.11.14	CR_PTIMER Command67
9.11.15	CR_PTIME Command67
9.11.16	CR_CCAPTIONDISP Command67
9.11.17	CR_CCAPTIONCOLOR Command67
9.11.18	CR_RCODE Command67
9.11.19	CR_SECURITY Command68
9.11.20	CR_KEYDIS Command68
9.11.21	CR_PJLOCKNOW Command68
9.11.22	CR_PJLOCKMENU Command68
9.11.23	CR_FANMODE Command68
9.11.24	CR_FANCONTROL Command69
9.11.25	CR_ DELAYCTRL Command69
9.11.26	CR_FILH Command69
9.11.27	CR_FILREPL Command69
9.11.28	CR_FILTIMER Command69
9.11.29	CR_TTLPWRSAVEKWH Command70
9.11.30	CR_TTLPWRSAVECO2 Command70
9.12 Oth	er Status Read Command71
9.12.1	CR_STATUS Command71
9.12.2	CR_SIGNAL Command71
9.12.3	CR_VMUTE Command71
9.12.4	CR_FREEZE Command71
9.12.5	CR_TEMPWARN Command72
9.12.6	CR_TEMP Command73
9.12.7	CR_TEMPFAIL Command74
9.12.8	CR_SERIALNO Command74

1. Overview

- 1.1 This Functional Specification defines communication functions for LV-7490.
- 1.2 Compatible to Firmware Ver. 1.x of the projector.
- 1.3 Most commands can be used to control projector remotely from PC by RS-232C. Therefore, the commands are defined as Expand Serial Commands.

2. Serial Interface Specification

2.1 Transfer Specification


Item	Specification
Synchronous System	Asynchronous
Transmission Speed	9600 / 19200
Data Length	8 bit
Parity	N/A
Stop Bit	1
Flow Control	N/A

Note1) Transmission Speed: initial setting value is 19200

Note2) Transmission Speed can be changed in service mode.

2.2 Connection

Dedicated serial cable must be used for a connection to a computer and a projector.

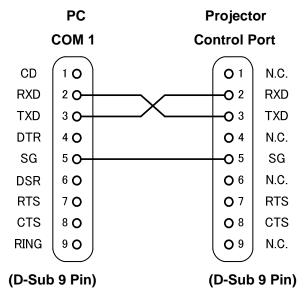

3. Notes for communication


- Expand Serial Command is defined as one command / one line that starts with "C" and ends with carriage return (0x0D)
- 2. There are two types of commands: Functional Execution Command and Status Read Command.
 - Example of Functional Execution Command: "CF_BRIGHT_032" [CR]
 - Example of Status Read Command: "CR_RIGHT"[CR]

Note) "_" means a space

3. When it takes more than one second to receive one command, it is not executed.

When it takes more than one second to receive carriage return (0X0D) after the projector receives the first data "C", it clears the information of buffer.

4. On command pipelining, wait for the interval of 100ms till sending next command after receiving a response.

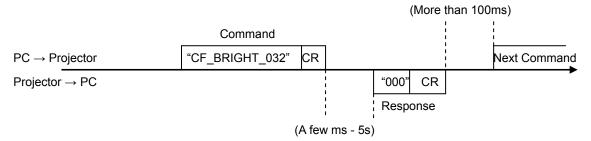

When a computer sends next command before receiving a response, the projector may not operate properly, except when there is no response for more than 5 seconds.

5. It takes about 5 seconds for internal initialization after plugging in AC power. During this time commands cannot be processed. Do not issue any command.

4. Name Definition

- 1. Data from a controller to a projector is represented as COMMAND, and data from a projector to a controller for the incoming command is represented as RESPONSE.
- 2. [CR]: Carriage Return Code

Command ends with cartridge return code.

Response also ends with carriage return code.

3. _: Space Code

A space Code is indicated by (_).

4. %1: Parameter in Command

When there are several parameters, they are defined as %2, %3...

5. %%%: Error code returned from a projector

Acceptable: "000".

Unacceptable: See [7. Error Code Table].

6. %a: Parameter in Response Command

When there are several parameters, they are defined as %b, %c...

5. Functional Execution Command Table

5.1 Image Command Table

Execute command	Item
CF_BRIGHT_%1[CR]	Set Brightness value
CF_CONT_%1[CR]	Set Contrast value
CF_COLOR_%1[CR]	Set Color value
CF_TINT_%1[CR]	Set Tint value
CF_SHARP_%1[CR]	Set Sharpness value
CF_GAMMA_%1[CR]	Set Gamma value
CF_WBAL-R_%1[CR]	Set White Balance Red value
CF_WBAL-G_%1[CR]	Set White Balance Green value
CF_WBAL-B_%1[CR]	Set White Balance Blue value
CF_COLTEMP_%1[CR]	Set Color Temp. value
CF_PROGV_%1[CR]	Set /Cancel Progressive Scan
CF_NZRED_%1[CR]	Set/Cancel Noise reduction
CF_IMAGE_%1[CR]	Set Image mode
CF_COLBOARD_%1[CR]	Set Colorboard mode
CF_IMAGEADJ_%1[CR]	Reset/Store for Image Adjustment

5.2 PC Adjust Control Command Table

Execute command	Item
CF_FSYNC_%1[CR]	Set Fine Sync value
CF_TDOTS_%1[CR]	Set Total Dots value
CF_CLAMP_%1[CR]	Set Clamp Value
CF_H-POS_%1[CR]	Set Horizontal Position value
CF_V-POS_%1[CR]	Set Vertical Position value
CF_DDOTS_%1[CR]	Set Display Dots value
CF_DLINE_%1[CR]	Set Display Line value
CF_PCSTORE_%1[CR]	Store current values of PC Adjust at Mode 1-10
CF_PCMODEFREE_%1[CR]	Release registered values of Mode1-10

5.3 Input Control Command Table

Execute command	Item
CF_INPUT_%1[CR]	Select Input
CF_SOURCE_%1[CR]	Select Input Source
CF_INPUT1 _%1[CR]	Select computer-1 and set Input selected in %1
CF_INPUT2_%1[CR]	Select computer-2 and set Input selected in %1
CF_INPUT3_%1[CR]	Select Video and set Input selected in %1
CF_INPUT4_%1[CR]	Select S-video and set Input selected in %1
CF_INPUT_%1_%2[CR]	Select Input and Source
CF_SYSTEM_%1[CR]	Select System

5.4 Screen Command Table

Execute command	Item
CF_SCREEN_%1[CR]	Select Aspect mode (screen size)
CF_DZCENT_%1[CR]	Cancel Digital Zoom mode
CF_VSCALE_%1[CR]	Set value of Vertical scale
CF_VPOS_%1[CR]	Set value of Vertical position
CF_HSCALE_%1[CR]	Set value of Horizontal scale
CF_HPOS_%1[CR]	Set value of Horizontal position
CF_KEYSTONE_%1[CR]	Set Keystone
CF_KYSTNMODE_%1[CR]	Set Keystone Store mode
CF_CEIL_%1[CR]	Set Ceiling function
CF_REAR_%1[CR]	Set Rear function

5.5 Lamp Command Table

Execute command	Item
CF_LAMPMODE_%1[CR]	Select Lamp mode
CF_LAMPLIFECONTRL_%1[CR]	Select Lamp life mode

5.6 Sound Command Table

Execute command	Item
CF_VOLUME_%1[CR]	Set Volume value
CF_MUTE_%1[CR]	Control ON/OFF of Sound Mute
CF_MIC_%1[CR]	Control ON/OFF of MIC
CF_MICGAIN_%1[CR]	Control value of MIC GAIN
CF_STANDBYMICOUT_%1[CR]	Control ON/OFF of STANDBY MIC OUT

5.7 Setting Command Table

Execute command	Item
CF_LANG_%1[CR]	Select language for OSD
CF_MENUPOSITION_%1[CR]	Move menu position.
CF_INPUTSEARCH_%1[CR]	Set up Auto input function
CF_AUTOSETUPPCADJ_%1[CR]	Set Auto PC in Auto Setup
CF_AUTOSETUPKEYSTONE_%1[CR]	Set Auto Keystone in Auto Setup
CF_AUTOSETUP_%1[CR]	Execute Auto Setup
CF_BACKGND_%1[CR]	Set screen mode for the case of no signal
CF_DISP_%1[CR]	Set Display function
CF_LOGO_%1_%2[CR]	Set Logo function
CF_TERMINAL_%1[CR]	Set Terminal function
CF_P-MANE_%1[CR]	Set Power management mode function
CF_P-MANETIME_%1[CR]	Set Power management mode time
CF_ON-STA_%1[CR]	Set Direct power on Start function
CF_STANDBYMODE_%1[CR]	Set Standby Mode
CF_PTIMEMODE_%1[CR]	Select P-timer mode
CF_PTIMER_%1[CR]	Execute P-timer
CF_PTIME_%1[CR]	Set Countdown timer for P-timer
CF_CCAPTIONDISP_%1[CR]	Set channel of Closed caption
CF_CCAPTIONCOLOR_%1[CR]	Set color of Closed caption
CF_RCODE_%1[CR]	Select Remote Control Reception Code
CF_KEYDIS_%1[CR]	Disable RC/Projector keys
CF_PJPINCODE_%1[CR]	Input PIN code to release PJ Lock
CF_FANMODE_%1[CR]	Select Fan mode
CF_FANCONTROL_%1[CR]	Select Fan control mode
CF_DELAYCTRL_%1[CR]	Set Video delay control
CF_FILTIMER_%1[CR]	Set time when Filter warning OSD is displayed
CF_FILH_%1[CR]	Reset Filter used time
CF_TTLPWRSAVE_%1[CR]	Reset the value of Total power savings
CF_FDEFAULT_%1[CR]	Set the value to Factory Default

5.8 Other Command Table

Execute command	Item
CF_KEYEMU_%1[CR]	Behave the same as corresponding key of projector top panel
CF_MENU_%1[CR]	Switch ON/OFF of each Menu.
CF_POWER_%1[CR]	Switch ON/OFF of Power.
CF_FREEZE _%1[CR]	Set Freeze function.
CF_VMUTE _%1[CR]	Set Blank function.

6. Status Read Command Table

6.1 Image Status Read Command Table

Status read command	Item
CR_BRIGHT[CR]	Get Brightness value
CR_CONT[CR]	Get Contrast value
CR_COLOR[CR]	Get Color value
CR_TINT[CR]	Get Tint value
CR_SHARP[CR]	Get Sharpness value
CR_GAMMA[CR]	Get Gamma value
CR_WBAL-R[CR]	White Balance Red value
CR_WBAL-G[CR]	White Balance Green value
CR_WBAL-B[CR]	White Balance Blue value
CR_COLTEMP[CR]	Get setting value of Color temperature
CR_NZRED[CR]	Get setting status of Noise reduction
CR_PROGV[CR]	Get setting status of Progressive scan
CR_IMAGE[CR]	Get Selected Image status
CR_IMGGMD[CR]	Get setting value of Image Gamma
CR_COLBOARD[CR]	Get Selected Colorboard mode

6.2 PC Adjust Status Read Command Table

Status read command	Item
CR_FSYNC[CR]	Get setting value of Fine Sync
CR_TDOTS[CR]	Get setting value of Total Dots
CR_CLAMP[CR]	Get setting value of Clamp
CR_H-POS[CR]	Get setting value of Horizontal Position
CR_V-POS[CR]	Get setting value of Vertical Position
CR_DDOTS[CR]	Get setting value of Display Dots
CR_DLINE[CR]	Get setting value of Display Line
CR_PCSTORE[CR]	Get Free or Stored status for PC Adj. mode1-10

6.3 Video Status Read Command Table

Status read command	Item
CR_SERSYS[CR]	Get selected current signal. When in Auto mode, it returns a result by Auto detect.

6.4 Input Status Read Command Table

Status read command	Item
CR_INPUT[CR]	Get selected Input No.
CR_SOURCE[CR]	Get selected source of currently selected Input
CR_SRCINP1[CR]	Get selected source of Computer 1
CR_SRCINP2[CR]	Get selected source of Computer 2
CR_SRCINP3[CR]	Get selected source of Video
CR_SRCINP4[CR]	Get selected source of S-video
CR_SYSTEM[CR]	Get selected system status in Input mode
CR_SYSLIST[CR]	Get selectable System table
CR_MODELIST[CR]	Get selectable Mode table

6.5 Screen Status Read Command Table

Status read command	Item
CR_SCREEN[CR]	Get selected Aspect mode (screen size)
CR_VSCALE[CR]	Get setting status of Vertical Scale
CR_VPOS[CR]	Get setting status of Vertical Position
CR_HSCALE[CR]	Get setting status of Horizontal Scale
CR_HPOS[CR]	Get setting status of Horizontal Position
CR_KYSTNMODE[CR]	Get setting status of Keystone Store mode
CR_CEIL [CR]	Get setting status of Ceiling
CR_REAR[CR]	Get setting status of Rear

6.6 Lamp Status Read Command Table

Status read command	Item
CR_LAMPREPL[CR]	Get the information for Lamp replacement time
CR_LAMPH[CR]	Get lamp total running time
CR_LAMPCORRESPH[CR]	Get corresponding lamp use time
CR_LAMPMODE[CR]	Get Lamp Mode status
CR_LAMPSTS[CR]	Get lamp lighting status
CR_PROJH[CR]	Get projector total running time
CR_HMLAMP[CR]	Get lamp number
CR_LAMPLIFECONTRL[CR]	Get setting status of Lamp life mode

6.7 Sound Status Read Command Table

Status read command	Item
CR_VOLUME[CR]	Get Volume value
CR_MUTE[CR]	Get Sound Mute setting status
CR_MIC[CR]	Get setting status of MIC
CR_MICGAIN[CR]	Get value of MIC GAIN
CR_STANDBYMICOUT[CR]	Get setting status of STANDBY MIC OUT

6.8 Setting Status Read Command Table

Status read command	Item
CR_LANG[CR]	Get selected language
CR_INPUTSEARCH[CR]	Get setting status of Auto input
CR_AUTOSETUPPCADJ	Get setting status of Auto PC in Auto setup
CR_AUTOSETUPKEYSTONE	Get setting status of Keystone in Auto setup
CR_BACKGND[CR]	Get setting status screen mode for the case of no signal
CR_DISP[CR]	Get setting status of Display
CR_LOGO[CR]	Get setting status of Logo
CR_TERMINAL[CR]	Get setting status of Terminal
CR_P-MANE[CR]	Get setting status of Power management mode
CR_P-MANETIME[CR]	Get setting time for Power management mode
CR_ON-STA[CR]	Get setting status of Direct power on
CR_STANDBYMODE[CR]	Get setting status of Standby Mode
CR_PTIMEMODE[CR]	Get selected mode of P-timer
CR_PTIMER[CR]	Get operation status of P-timer
CR_PTIME[CR]	Get setting status of Timer for P-timer
CR_CCAPTIONDISP[CR]	Get setting status of channel of Closed caption
CR_CCAPTIONCOLOR[CR]	Get setting status of color of Closed caption
CR_RCODE[CR]	Get selected Remote Control Code
CR_SECURITY[CR]	Get setting status of Security
CR_KEYDIS[CR]	Get RC/KEY disability status
CR_PJLOCKNOW[CR]	Get if PJ Lock is actually in operation
CR_PJLOCKMENU[CR]	Get setting status of PJ Lock on Menu
CR_FANMODE[CR]	Get selected Fan mode
CR_FANCONTROL[CR]	Get selected Fan Control Mode
CR_DELAYCTRL[CR]	Get setting status of Video delay control
CR_FILH[CR]	Get Filter used time
CR_FILREPL[CR]	Get the information for Filter replacement time
CR_FILTIMER[CR]	Get time when Filter warning OSD is displayed
CR_TTLPWRSAVEKWH[CR]	Get current value (kWh) of Total power savings
CR_TTLPWRSAVECO2[CR]	Get current value (kg/CO2) of Total power savings

6.9 Other Status Read Command

Status read command	Item
CR_STATUS[CR]	Get setting status of Projector behavior
CR_SIGNAL[CR]	Get Signal Status if there is a signal or not
CR_VMUTE[CR]	Get setting status of Blank
CR_FREEZE[CR]	Get setting status of Freeze
CR_TEMPWARN[CR]	Get if temperature is close to abnormal temperature
CR_TEMP[CR]	Get current temperature status
CR_TEMPFAIL[CR]	Get temperature when sensors detect abnormal temperature
CR_SERIALNO[CR]	Get value of SERIAL NO.

7. Error Code Table

Error Code	Contents
?	-When the received data cannot be decoded -Parameter determination error (digit number error, including invalid value, etc.)
101	The function is not available in the selected Mode
102	Selected value is out of range (Not reflected)
103	Command mismatched to Hardware (command for Optional function which is not installed)
201	When reached upper or lower limit of increasing or decreasing data
301	Command cannot be executed during capturing display. Resend the command after a while
302	Command cannot be executed during Auto PC operation. Resend the command after a while
402	Command cannot be executed during PIN code operation. Resend the command after a while.

Note) These error codes are applied to Expand Command, not to Basic Command

8. Functional Execution Command

8.1 Format

1. PC issues commands in format as below:

Pattern1: "CF_COMMAND" [CR]
Pattern2: "CF_COMMAND_"%1 [CR]

CF_: Header

COMMAND: Character line

%1 : Parameter (Character line)

_ : Space (To separate COMMAND and Parameter)

2. The projector decodes the received command and when it is ready to receive the next command, it returns the response.

"000" [CR]: (0x06, 0x0D) When receiving Functional Execution Command

"nnn" [CR]: Except "000", when it is unable to execute command by any specific reason.

See Error Code Table for details

3. When the received data cannot be decoded, the projector returns "?" [CR]

8.2 Transfer Example

When setting projector's total dots to 1344 by Expand Serial Command

PC → PJ: "CF_TDOTS_1344" [CR]

PC ← PJ: "000"[CR] - - - - - - Acceptable

8.3 Operation Requirements

1) Functional Execution Command is limited when the projector status is as below.

However, Status Read Command is effective even under these conditions.

Projector Status	Available Functional Execution Command
In Standby	C00: POWER ON
Countdown in process	C00: POWER ON (Terminates Countdown) C01: POWER OFF C02: POWER OFF (Terminates Countdown)
Cooling down in process	N/A
Cooling down in process due to Abnormal Temperature	N/A
Abnormal Temperature	N/A
Power Failure (For 60 seconds after Power Failure occurred)	N/A
Power Save / Cooling down in process	N/A
Power Save in process	C00: POWER ON C01: POWER OFF

Note:) When the projector receives the other command in this above status, it returns error code to show the status.

When the projector receives the following functional execution commands, OSD menu is closed except for pop-up menu

2) When Eco mode is selected in Standby mode of Setting menu and projector is in Standby, Functional Execution Commands are invalid.

8.4 Image Command

8.4.1 CF_BRIGHT Command

Command	"CF_BRIGHT_%1"[CR]	
%1	"000~063" Directly select Brightness setting value "UP" Current Brightness setting value + 1 "DN" Current Brightness setting value – 1	
Details	Set Brightness value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Posponso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.2 CF_CONT Command

Command	"CF_CONT_%1"[CR]	
%1	"000~063" Directly select Contrast setting value "UP" Current Contrast setting value + 1 "DN" Current Contrast setting value – 1	
Details	Set Contrast value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.3 CF_COLOR Command

Command	"CF_COLOR_%1"[CR]	
%1	"000~063" Directly select Color setting value "UP" Current Color setting value + 1 "DN" Current Color setting value - 1	
Details	Set Color value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dognanaa	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.4 CF_TINT Command

Command	"CF_TINT_%1"[CR]	
%1	"000~063" Directly select Tint setting value "UP" Current Tint setting value + 1 "DN" Current Tint setting value – 1	
Details	Set Tint value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.5 CF_SHARP Command

Command	"CF_SHARP_%1"[CR]	
%1	"UP" Current Sharpness setting value + 1 "DN" Current Sharpness setting value - 1	
Details	Set Sharpness value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.6 CF_GAMMA Command

Command	"CF_GAMMA_%1"[CR]	
%1	"UP" Current Gamma setting value + 1 "DN" Current Gamma setting value – 1	
Details	Set Gamma value of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.7 CF_WBAL - Command

Command	"CF_WBAL-%1_%2"[CR]	
%1	"R" "G" "B"	Green
%2	"000~063" Directly select Color value specified by White Balance%1 "UP" Current Color value set by White Balance%1 + 1 "DN" Current Color value set by White Balance%1 - 1	
Details	Set Color value set by White Balance%1 of user control Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.8 **CF_COLTEMP Command**

Command	"CF_COLTEMP_%1"[CR]	
%1	"000" Xlow "001" Low "002" Mid "003" High	
Details	Set Color Temperature. (Available only in the normal Power ON status) The value set by this command will not be saved to the projector. Therefore, when turning into Standby-mode or ALL is OFF, the value returns to original setting. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.9 CF_PROGV Command

Command	"CF_PROGV_%1"[CR]	
%1	"FILM" Select Progressive Mode FILM "L1" Select Progressive Mode L1 "L2" Select Progressive Mode L2 "OFF" Cancel Progressive scan "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key	
Details	Set / cancel Progressive scan Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.10 CF_NZRED Command

Command	"CF_NZRED_%1"[CR]	
%1	"OFF" Cancel Noise Reduction "L1" Noise Reduction for moving image "L2" Noise Reduction for still image "UP" The same operation as pressing Up key or Left key "DN"The same operation as pressing Down key or Right key	
Details	Noise Reduction based on frame correlation Select L1 or L2 depending on motion detection L2 is more effective in reducing noise than L1, however, L2 can have a blur in moving image Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. (The value is held in Suspend mode.) This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.11 **CF_IMAGE Command**

Command	"CF_IMAGE_%1"[CR]	
%1	"DYNAMIC" Presentation(Fixed value to enable projection with a sharp, powerful picture tone) "STAND" Standard (Image adjust value is set to factory default) "REAL" High contrast (Fixed value to display graphic image with natural tone) "CINEMA" Cinema (Fixed value to focus on tone reproduction for movie) "BLACKBOARD" – Blackboard (Fixed value to project image onto green-colored blackboard) "COLORBOARD" – Colorboard(Fixed value to project image onto colored board) "CUSTOM1" User1 (the value set and stored by a user) "CUSTOM3" User3 (the value set and stored by a user) "CUSTOM4" User4 (the value set and stored by a user)	
Details	Select Image Mode Parameter "CUSTOM1" to "CUSTOM4" is the same as "User1" to "User4" displayed when selecting Image on OSD menu. The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.12 CF_COLBOARD Command

Command	"CF_COLBOARD_%1"[CR]	
%1	_	
Details		Colorboard mode. s automatically switched to Colorboard mode by receiving this
Botallo	The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.4.13 CF_IMAGEADJ Command

Command	"CF_IMAGEADJ_%1"[CR]	
%1	"RST" Reset Image adjustment "STR1" Store current Image adjustment to User 1 "STR2" Store current Image adjustment to User 2 "STR3" Store current Image adjustment to User 3 "STR4" Store current Image adjustment to User 4	
Details	Reset / store Image adjustment. Parameter "STR1" to "STR4" is the same as "User1" to "User4" displayed when adjusting Image on OSD menu and selecting "Store" The value stored to "User 1-4" is saved and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Posnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5 PC Adjust Control Command

8.5.1 CF_FSYNC Command

Command	"CF_FSYNC_%1"[CR]	
%1	"0000~0031" Directly select Fine Sync setting value "UP" Current Fine Sync setting value + 1 "DN" Current Fine Sync setting value - 1	
Details	Set Fine Sync value of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.2 **CF_TDOTS Command**

Command	"CF_TDOTS_%1"[CR]	
%1	"mmmm~nnnn" Directly select Total Dots setting value "mmmm" shows minimum value, it is current Display Dots Horizontal value + Position value. "nnnn" shows maximum value, which is not over 140MHz. "UP" Current Total Dots setting value + 1 "DN" Current Total Dots setting value - 1	
Details	Set Total Dots of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Poononoo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.3 CF_CLAMP Command

Command	"CF_CLAMP_%1"[CR]	
%1	"mmmm~nnnn" Directly select Clamp setting value "mmmm" shows minimum value, fixed-value "0001". "nnnn" shows maximum value: it depends on input signal. "UP" Current Clamp setting value + 1 "DN" Current Clamp setting value – 1	
Details	Set Clamp value of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.4 CF_H – POS Command

Command	"CF_H-POS_%1"[CR]	
%1	"0000~nnnn" Directly select Horizontal Position setting value "nnnn" shows maximum value, it is current Total Dots value - Display Dots value "UP" Current Horizontal Position setting value + 1 "DN" Current Horizontal Position setting value - 1	
Details	Set Horizontal Position value of PC signal. Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Doonongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.5 CF_V – POS Command

Command	"CF_V-POS_%1"[CR]	
%1	"0000~nnnn" Directly select Vertical Position setting value "nnnn" shows maximum value, it is current Total Line value - Display Line value "UP" Current Vertical Position setting value + 1 "DN" Current Vertical Position setting value – 1	
Details	Set Vertical Position value of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Dognanas	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.6 CF_DDOTS Command

Command	"CF_DDOTS_%1"[CR]	
%1	"0256"~"nnnn" Directly select Display Dots setting value "nnnn" shows maximum value, it is current Total Dots value - Horizontal Position value Even number is available and when odd number is set, it is rounded out. "UP" Current Display Dots setting value + 2 "DN" Current Display Dots setting value – 2	
Details	Set Display Dots value of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.7 CF_DLINE Command

Command	"CF_DLINE_%1"[CR]	
%1	"0100"~"nnnn" Directly select Display Line setting value "nnnn" shows maximum value, it is current Total Line value – Vertical Position value "UP" Current Display Line setting value + 1 "DN" Current Display Line setting value – 1	
Details	Set Display Line value of PC signal Projector does not save the value set with this command so that it resets when projector turning into Standby status or ALL is OFF. This command is available in normal Power ON status.	
Posnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.8 CF_PCSTORE Command

Command	"CF_PCSTORE_%1"[CR]	
%1	"MODE1" Store current PC Adjust status to Mode1 "MODE2" Store current PC Adjust status to Mode2 "MODE3" Store current PC Adjust status to Mode3 "MODE4" Store current PC Adjust status to Mode4 "MODE5" Store current PC Adjust status to Mode5 "MODE6" Store current PC Adjust status to Mode6 "MODE7" Store current PC Adjust status to Mode7 "MODE8" Store current PC Adjust status to Mode8 "MODE9" Store current PC Adjust status to Mode9 "MODE10" Store current PC Adjust status to Mode10	
Details	Store current PC Adjust status (each parameter status such as Total dots) to Mode1~Mode10. This command operates the same way as storing to Mode1-Mode10 in PC Adjust MENU. This command is available in normal Power ON status.	
Pesnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.5.9 CF_PCMODEFREE Command

Command	"CF_PCMODEFREE_%1"[CR]	
%1	"MODE1" Set Mode1 to Free status "MODE2" Set Mode2 to Free status "MODE3" Set Mode3 to Free status "MODE4" Set Mode4 to Free status "MODE5" Set Mode5 to Free status "MODE6" Set Mode6 to Free status "MODE7" Set Mode7 to Free status "MODE8" Set Mode8 to Free status "MODE9" Set Mode9 to Free status "MODE9" Set Mode10 to Free status	
Details	Delete the registered data in Mode1-Mode10 and turns it to Free status. This command operates the same as turning Mode1-Mode10 to Free in PC Adjust Menu. This command is available in normal Power ON status.	
Pesnonse	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.6 Input Control Command

8.6.1 CF_INPUT Command

Command	"CF_INPUT_%1"[CR]	
%1	"CONPUTER1" Select Computer1 Input "COMPUTER2" Select Computer2 Input "VIDEO" Select Video Input "S-VIDEO" Select S-video Input "UP" The same operation as pressing Up key or Left key "DN"The same operation as pressing Down key or Right key	
Details	Select Input The same operation as "INPUT" button of the projector and Remote Control. This command is available in normal Power ON status. Projector returns "101" by selecting Computer 2 while Monitor out is selected in Terminal menu.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.6.2 CF_SOURCE Command

Command	"CF_SOURCE_%1"[CR]	
	Input is Computer 1	"ANALOG" Select Analog Input "YPBPR" Select Component Input "SCART" Select Scart Input "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key
%1	Input is Computer 2	"ANALOG" Select Analog Input "UP" "DN" Although no operation is executed, projector accepts parameter "UP" /"DN"
	Input is Video	"VIDEO" Select Composite Video Input "UP" "DN" Although no operation is executed, projector accepts parameter "UP" /"DN"
	Input is S-video	"S-VIDEO" Select S-video Input "UP" "DN" Although no operation is executed, projector accepts parameter "UP" /"DN"
Details	Select Source of currently selected Input When Input specified by %1 is inappropriate for selected Input, the projector returns "101" and the command is not executed. This command is available in normal Power ON status.	
Pesnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.6.3 CF_INPUT1 Command

Command	"CF_INPUT1_%1_"[CR]	
%1	"ANALOG" Select Analog RGB Input "YPBPR" Select Component "S – VIDEO" Select S-Video Input "SCART" Select SCART	
Details	Select Computer 1 input and source specified by %1 at the same time. This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.6.4 CF_INPUT2 Command

Command	"CF_INPUT2_%1_"[CR]	
%1	"ANALOG" Select Analog RGB Input	
Details	Select Computer 2 input and source specified by %1 at the same time. This command is available in normal Power ON status. Projector returns "101" by selecting Computer 2 while Monitor out is selected in Terminal menu.	
Response	Acceptable	"000"[CR]
response	Unacceptable	"Error Code"[CR]

8.6.5 CF_INPUT3 Command

Command	"CF_INPUT3_%1_"[CR]	
%1	"VIDEO" Select Composite video Input	
Details	Select Video input. This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.6.6 CF_INPUT4 Command

Command	"CF_INPUT4_%1_"[CR]	
%1	"S-VIDEO" Select S-video Input	
Details	Select S-video input. This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.6.7 **CF_INPUT_%1_%2 Command**

Command	"CF_INPUT_%1_%2"[CR]		
%1	"COMPUTER2 "VIDEO"	"COMPUTER1" Select Computer1 Input "COMPUTER2" Select Computer2 Input "VIDEO" Select Analog Input "S-VIDEO" Select S-video Input	
%2	When %1 is COMPUTER1 "ANALOG"Select Analog RGB Input "YPBPR" Select Component "S-VIDEO" Select S-Video Input "SCART" Select SCART When %1 is COMPUTER2 "ANALOG" Select Analog RGB Input When %1 is VIDEO "VIDEO" Select Video Input When %1 is S-VIDEO "S-VIDEO" Select S-video Input		
Details	Select Input specified by %1 and also Source specified by %2 at once This command is available in normal Power ON status. Projector returns "101" by selecting Computer 2 while Monitor out is selected in Terminal menu.		
Donners	Acceptable	"000"[CR]	
Response	Unacceptable	"Error Code"[CR]	

8.6.8 CF_SYSTEM Command

Command	"CF_SYSTEM_%1"[CR]	
%1	Input is Computer	"VGA1" Select VGA1 : "XGA1" Select XGA1 : "WXGA3" Select WXGA3 "1080I" Select 1080I "1035I" Select 1035I "720P" Select 720P "575P" Select 575P "480P" Select 480P "575I" Select 575I "480I" Select 480I "MODE1"~ "MODE10" Select Mode 1~Mode 10
	Input is Video	"AUTO" Select System "Auto" "NTSC" Select NTSC "NTSC443" Select NTSC4.43 "PAL" Select PAL "SECAM" Select SECAM "PAL-M" Select PAL-M "PAL-N" Select PAL-N "1080I" Select 1080i "1035I" Select 1035i "720P" Select 720p "575P" Select 575p "480P" Select 480p "575I" Select 575i "480I" Select 480i
Details	When Input spreturns "101"[C This command Note1) "NTSC" only wh	of currently selected Input pecified by %1 is inappropriate for selected Input, the projector R] and the command is not executed is available in normal Power ON status. 7 / "NTSC4.43" / "PAL" / "SECAM" / "PAL-M" / "PAL-N" is available then Input is VIDEO / S-VIDEO / "1035!" / "720P" / "575P" / "480P" / "575I" / "480I" is available only
	when I	nput is Y / Pb/Cb / Pr/Cr
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.7 Screen Control Command

8.7.1 CF_SCREEN Command

Command	"CF_SCREEN_%1"[CR]	
%1	Input is Computer	"NORMAL"
	Input is Video	"NORMAL"
	AV / PC Common	"RST" Reset screen adjustment
Details	Select size on screen (in Aspect menu). When Input specified by %1 is inappropriate for selected Input, the projector returns "101" [CR] and the command is not executed. "DZOOM UP" and "DZOOM DN" start effecting from the first command. This command is available in normal Power ON status. Note) When Input is computer and AV sorts signals (480i / 575ietc) are entered, the signal recognized as Video Input.	
Desnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.2 CF_DZCENT Command

Command	"CF_DZCENT_%1"[CR]		
%1	"CENT" Cancel Digital Zoom (CENT: "CENTER")		
Details	Cancel Digital Zoom When image is expanded or shrunk, reset its value. This command is available in normal Power ON status and when Input is Computer.		
Response	Acceptable	"000"[CR]	
	Unacceptable	"Error Code"[CR]	

8.7.3 CF_VSCALE Command

Command	"CF_VSCALE_%1"[CR]	
%1	"032" +32 "031" +31 : "002" +2 "001" +1 "000" +0 "-01"1 "-02"2 : "-31"31 "-32"32 "UP" Vertical Scale setting value + 1 "DN" Vertical Scale setting value - 1	
Details	Set Vertical Scale This command is available in normal Power ON status. Note1) When Aspect setting is not in Custom mode, projector changes image mode into Custom by receiving this command. Note2) When there is no signal detected, projector returns 101 and the command does not execute.	
Pesnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.4 CF_VPOS Command

Command	"CF_VPOS_%"	1"[CR]
%1		14 2 1 0 1 2
Details	Set Vertical Position This command is available in normal Power ON status. Note1) When Aspect setting is not in Custom mode, projector changes image mode into Custom by receiving this command. Note2) When there is no signal detected, projector returns 101 and the command does not execute	
Dognones	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.5 CF_HSCALE Command

Command	"CF_HSCALE_%1"[CR]	
%1	"032" +32 "031" +31 : "002" +2 "001" +1 "000" +0 "-01"1 "-02"2 : "-31"31 "-32"32 "UP" Horizontal Scale setting value + 1 "DN" Horizontal Scale setting value - 1	
Details	Set Horizontal Scale This command is available in normal Power ON status. Note1) When Aspect setting is not in Custom mode, projector changes image mode into Custom by receiving this command. Note2) When there is no signal detected, projector returns 101 and the command does not execute.	
Response	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.6 CF_HPOS Command

Command	"CF_HPOS_%1"[CR]	
%1	"015" +15 "014" +14 : : "002" +2 "001" +0 "-01"1 "-02"2 : "-14"15 "UP" Horizontal Position setting value + 1 "DN" Horizontal Position setting value - 1	
Details	Set Horizontal Position This command is available in normal Power ON status. Note1) When Aspect setting is not in Custom mode, projector changes image mode into Custom by receiving this command. Note2) When there is no signal detected, projector returns 101 and the command does not execute.	
Pesnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.7 **CF_KEYSTONE Command**

Command	"CF_KEYSTONE_%1"[CR]	
%1	"UP" Correct Keystone distortion to reduce upper part of image "FUP" Correct Keystone distortion to reduce upper part by 2steps "DN" Correct Keystone distortion to reduce lower part of image "FDN" Correct Keystone distortion to reduce lower part by 2steps "RST" Reset Keystone	
Details	Change Keystone distortion correction This command is available in normal Power ON status.	
	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR] "201"[CR]When reaching the Keystone correction limit or reaching 1 step to correction limit and "FDN"/"FUP" is received. (The command is not executed)

8.7.8 **CF_KYSTNMODE** Command

Command	"CF_KYSTNMODE_%1"[CR]	
%1	"STR" Set Keystone store mode to Store "RST" Set Keystone store mode to Reset	
Details	Set Keystone store mode This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.9 CF_CEIL Command

Command	"CF_CEIL_%1"	[CR]
%1	"ON" Set Ceiling to ON "OFF" Set Ceiling to OFF	
Details	Set/Cancel Ceiling setting. The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.7.10 CF_REAR Command

Command	"CF_REAR_%1"[CR]	
%1	"ON" Set Rear to ON "OFF" Set Rear to OFF	
Details	Set/Cancel Rear setting. When Rear is ON, image is left/right reversed. The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Pesnonse	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.8 Lamp Command

8.8.1 **CF_LAMPMODE** Command

Command	"CF_LAMPMO	DE_%1"[CR]
%1	"NORMAL" "ECO1" "ECO2" "UP"	Set lamp to Auto status Set lamp to Normal mode status Set lamp to Eco1 mode status Set lamp to Eco2 mode status The same operation as pressing Up key or Left key The same operation as pressing Down key or Right key
Details	Select Lamp Mode The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Doonongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.8.2 CF_ LAMPLIFECONTRL Command

Command	"CF_LAMPLIFE	ECONTRL_%1"[CR]
%1	"MODE1" Set Lamp life control to Mode 1 "MODE2" Set Lamp life control to Mode 2	
Details	Select Lamp life control function The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.9 Sound Command

8.9.1 CF_VOLUME Command

Command	"CF_VOLUME_%1"[CR]	
%1	"000-063" Directly select Volume setting value "UP" Current Volume setting value +1 "DN" Current Volume setting value -1	
Details	Control Volume value The same operation of Volume Up/Down as projector and RC, and directly select Volume setting value. When setting Volume value, the Sound Mute ON status is canceled just like RC operation. The value set by this command is stored in Projector. This command is available in normal Power ON status.	
Pesnonse	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.9.2 CF_MUTE Command

Command	"CF_MUTE_%	1"[CR]
%1	"ON" Set Sound Mute to ON "OFF" Set Sound Mute to OFF	
Details	Control Sound Mute ON/OFF This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.9.3 CF_MIC Command

Command	"CF_MIC_%1" [CR]	
%1	"ON" Set MIC to ON "OFF" Set MIC to OFF	
Details	Control MIC ON/OFF This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.9.4 CF_MICGAIN Command

Command	"CF_MICGAIN_%1"[CR]	
%1		Directly select MIC gain setting value Current MIC GAIN setting value +1 Current MIC GAIN setting value -1
Details	Control MIC GAIN value When setting MIC GAIN value just like operation by menu, the Sound Mute ON status is canceled. The value set by this command is stored in Projector. This command is available in normal Power ON status.	
Dognanas	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.9.5 CF_STANDBYMICOUT Command

Command	"CF_STANDBYMICOUT_%1"[CR]	
%1	"ON" Set STANDBY MIC OUT to ON "OFF" Set STANDBY MIC OUT to OFF	
Details	Control STANDBY MIC OUT ON/OFF This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10 Setting Command

8.10.1 CF_LANG Command

Command	"CF_LANG_%1"[CR]		
%1	"DEU" "FRA" "ESP" "POR" "SVE" "SVE" "KUS" "KOR" "JPN" "FIN" "HUN" "HUN" "THA" "TUR" "KAZ" "VIE"	Select English Select German Select French Select Spanish Select Portuguese Select Dutch Select Swedish Select Russian Select Chinese Select Korean Select Japanese Select Hungarian Select Hungarian Select Thai Select Turkish Select Kazakh Select Vietnamese Select Vietnamese Select Czech	
Details	Set language for OSD The language set by this command is stored in EEPROM and its setting is effective after ALL is OFF. This command is available in normal Power ON status.		
Resnonse	Acceptable	"000"[CR]	
Response	Unacceptable	"Error Code"[CR]	

8.10.2 CF_MENUPOSITION Command

Command	"CF_MENUPOSITION_%1"[CR]		
%1	"SET"	"SET" Move the menu display to next position	
Details	Change the menu position This command is available in normal Power ON status. The language set by this command is stored in EEPROM and its setting is effective after ALL is OFF. Position: center – bottom left-bottom right – top left - top right – center Menu display appears with the first command when menu display is not shown on the screen		
Dosponso	Acceptable	"000"[CR]	
Response	Unacceptable	"Error Code"[CR]	

8.10.3 CF_INPUTSEARCH Command

Command	"CF_INPUTSEARCH_%1"[CR]	
%1	"OFF" Set Auto input operation to OFF "ON1" Set Auto input operation to On1 "ON2" Set Auto input operation to On2	
Details	Set Auto input operation mode. The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status. Note) It is unable to set Keystone, Auto PC and Auto input to OFF at once. e.g. If projector receives Auto input OFF command while Auto PC and Keystone are OFF, it returns error code "101"	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.4 CF_AUTOSETUPPCADJ Command

Command	"CF_AUTOSETUPPCADJ_%1"[CR]	
%1	"ON" "OFF"	Set Auto PC function to ON Set Auto PC function to OFF
Details	Note) It is unable e.g. If projector	PC function s available in normal Power ON status. e to set Keystone, Auto PC and Auto input to OFF at once. receives Auto PC OFF command while Keystone and Auto input is error code "101".
Doeponeo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.5 CF_AUTOSETUPKEYSTONE Command

Command	"CF_AUTOSETU	JPKEYSTONE_%1"[CR]
%1	"MANUAL"	Set Auto Keystone function to Auto Set Auto Keystone function to Manual Set Auto Keystone function to OFF
Details	Set Keystone function of Auto setup This command is available in normal Power ON status. Note) It is unable to set Keystone, Auto PC and Auto input to OFF at once. e.g. If projector receives Keystone OFF command while Auto PC and Auto input are OFF, it returns error code "101"	
Posponso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.6 CF_AUTOSETUP Command

Command	"CF_AUTOSETUP_%1"[CR]	
%1	"START"	Execute Auto Setup
Details	Execute Auto Setup Note) CF commands does not execute while Auto setup is in process. If the command is sent during this, projector returns error code "302"	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10.7 CF_BACKGND Command

Command	"CF_BACKGND_%1" [CR]	
%1	"BLUE" Select Blue Back "USER" Select User "BLACK" Select Black Back "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key	
Details	Set Screen status for no signal.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status. *When %1="USER" is received, error code "101" is returned, in the case of Capture non-practice.	
Doenoneo	Acceptable	"000" [CR]
Response	Unacceptable	"Error Code" [CR]

8.10.8 CF_DISP Command

Command	"CF_DISP_%1"[CR]	
%1	"OFF" "CNTDWNOFF "UP"	Select DisplayCancel Display "Count down OFFThe same operation as pressing Up key or Left keyThe same operation as pressing Down key or Right key
Details	Set / Cancel Display The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.9 CF_LOGO Command

Command	"CF_LOGO_%1_%2"[CR]		
%1	"0000"-"9999" Set LOGO PIN CODE directly		
%2	"OFF" Disable Logo function "DFLT" Display Default Logo "USER" Display Captured Logo "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key		
Details	"DN" The same operation as pressing Down key or Right key Set / Cancel Logo The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF This command is available in normal Power ON status. %1 Set LOGO PIN CODE - When LOGO LOCK is in operation PIN CODE is correct		
_	Acceptable	"000"[CR]	
Response	Unacceptable	"Error Code"[CR]	

8.10.10 CF_TERMINAL Command

Command	"CF_TERMINAL_%1"[CR]	
%1	"COMPUTER"Set Input mode "MONITOR" Set Monitor Out mode	
Details	Set Terminal setup. This command is available in normal Power ON status. Terminal means Computer 2 in this model.	
	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code" [CR] When Input is Computer 2, the projector returns "101" and the command is not executed.

8.10.11 CF_P-MANE Command

Command	"CF_P-MANE_%1"[CR]	
%1	"OFF"	
Details	Set/Cancel Power management mode The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10.12 CF_P-MANETIME Command

Command	"CF_P-MANETIME_%1"[CR]	
% 1	"UP"	Directly select setting time by the minute Plus one minute (01 \rightarrow 02 \rightarrow \cdots \rightarrow 30 \rightarrow 01) Minus one minute(30 \rightarrow 29 \rightarrow \cdots \rightarrow 01 \rightarrow 30)
Details	Set Power management mode time The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10.13 CF_ON-STA Command

Command	"CF_ON-STA_%1"[CR]	
%1		
Details	Set/Cancel Direct power on The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Bosponso	Acceptable "000"[CR]	
Response	Unacceptable	"Error Code"[CR]

8.10.14CF_STANDBYMODE Command

Command	"CF_STANDBYMODE_%1"[CR]	
%1	"ECO" Less standby electricity "NORMAL" Normal standby electricity	
Details	Switch Standby Mode setting. This command is available in normal Power ON status.	
Bosponso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.15 CF_PTIMEMODE Command

Command	"CF_PTIMEMODE_%1"[CR]	
%1	"COUNTUP" Select Count up "COUNTDN" Select Countdown	
Details	Set operation mode of P-timer. The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.16 CF_PTIMER Command

Command	"CF_PTOMER_%1"[CR]	
%1	"STOP" "RESTART" "RST"	Execute P-timer Pause P-timer Restart P-timer Reset P-timer Terminate P-timer function
Details	Control P-timer. This command is available in normal Power ON status.	
Dosnonso	Acceptable "000"[CR]	
Response	Unacceptable	"Error Code"[CR]

8.10.17 CF_PTIME Command

Command	"CF_PTIME_%1"[CR]	
%1	"001" ~ "180"Directly specify the timer by minutes.	
Details	Set Countdown timer for P-timer function. The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.18 CF_CCAPTIONDISP Command

Command	"CF_CCAPTIONDISP_%1"[CR]	
%1	"OFF" Select Off "CC1" Select CC1 "CC2" Select CC2 "CC3" Select CC3 "CC4" Select CC4	
Details	Select channel of Closed caption. The status set with this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status. Closed caption is available under conditions below; Entered signal is appropriate (Video, NTSC signal of S-video) and System is fixed to NTSC.	
Posnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.19CF_CCAPTIONCOLOR Command

Command	"CF_CCAPTIONCOLOR_%1"[CR]	
%1	"COLOR" Select Color "WHITE" Select White	
Details	Select color of Closed caption. The status set with this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status. Closed caption is available under conditions below; Entered signal is appropriate (Video, NTSC signal of S-video) and System is fixed to NTSC.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.20 CF_RCODE Command

Command	"CF_RCODE_%1"[CR]	
%1	"001" Select Code1 "002" Select Code2 "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key	
Details	Select Code of Remote Control The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
Dooponoo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.21 CF_KEYDIS Command

Command	"CF_KEYDIS_%1"[CR]	
%1	"NONE" "RC" "KEY"	RC keys are invalid
Details	Disable RC/Projector keys This command is available in normal Power ON status.	
Doononoo	Acceptable "000"[CR]	
Response	Unacceptable	"Error Code"[CR]

8.10.22 CF_PJPINCODE Command

Command	"CF_PJPINCODE_%1"[CR]	
%1	"0000" – "9999"	'Set PJ PIN CODE directly
Details	-When PJ LOC PIN CODE is PIN CODE is PIN CODE is PIN CODE is -When PJ LOC PIN CODE is w PIN CODE is o This command and Count dow	LOCK setting is "On1", it is necessary to transmit this command
Donners	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.23 CF_FANMODE Command

Command	"CF_FANMODE_%1"[CR]	
%1	"L1" Set Fan Mode to L1 "L2" Set Fan Mode to L2	
Details	Switch Fan Mode When L1 is selected, fan noise after POWER OFF is louder. When L2 is selected, fan noise after POWER OFF becomes quiet, however, fan rotates longer than L1. The status set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Dosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.24 CF_FANCONTROL Command

Command	"CF_FANCONTROL_%1"[CR]	
%1	"OFF" Set Fan control to Off "ON1" Set Fan control to On1 "ON2" Set Fan control to On2	
Details	Set Fan control setting. The status set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Dognongo	Acceptable "000"[CR]	
Response	Unacceptable	"Error Code"[CR]

8.10.25 CF_DELAYCTRL Command

Command	"CF_DELAYCTRL_%1"[CR]	
%1	"ON" Set Video delay control On "OFF" Set Video delay control Off	
Details	Set Video delay control. The status set by this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.	
Bosponso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.26 CF_FILTIMER Command

Command	"CF_FILTIMER_%1"[CR]	
%1	"2000" "3000" "4000" "5000" "0FF"	Set 1000 hours Set 2000 hours Set 3000 hours Set 3000 hours Set 4000 hours Set 5000 hours Set 5000 hours Set 6000 hours Set Formula display The same operation as pressing Up key or Left key The same operation as pressing Down key or Right key
Details	Set timer of Filter replacement /clean-up warning display.	
Bosponso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.10.27 CF_FILH Command

Command	"CF_FILH_%1"[CR]	
%1	"RST"Reset Filter used time	
Details	Reset filter used time	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10.28CF_TTLPWRSAVE Command

Command	"CF_TTLPWRSAVE _%1"[CR]	
%1	"RST"Reset Total power savings	
Details	Reset the value of Total power savings	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.10.29 CF_FDEFAULT Command

Command	"CF_FDEFAULT_%1"[CR]	
%1	"RST"	
Details	Set the value to Factory Default This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.11 Other Command

8.11.1 CF_KEYENU Command

Command	"CF_KEYENU_%1"[CR]	
%1	"LEFT" "UP" "DN" "SELECT"	Shift Pointer on OSD Menu to right Shift Pointer on OSD Menu to left Shift Pointer on OSD Menu to right
Details	This command behave the same as corresponding keys of Remote Control / Projector Auto PC keeps operating even though projector receives this command again while Auto PC is in process.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

8.11.2 CF_MENU Command

Command	"CF_MENU_%1"[CR]	
%1	"ON" Display OSD Menu "OFF" Cancel OSD menu	
Details	Display / Cancel On Screen Display Menu This command is available in normal Power ON status.	
Dognongo	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.11.3 CF_POWER Command

Command	"CF_POWER_%1"[CR]		
		"ON"Power ON projector "OFF" Power OFF Projector	
	Note1) Countdown can be terminated by sending this command.		
%1	Note2) Projector returns error code due to unable of command execution depends on its condition.		
	Note3) Although projector returns "OK", operation may not be proceeding properly. (e.g. After returning "000" for Power ON command, projector gets abnormal temperature.) Use Status read command to get projector states.		
Details	Power ON / OFF projector.		
Posnonso	Acceptable	"000"[CR]	
Response	Unacceptable	"Error Code"[CR]	

8.11.4 CF_FREEZE Command

Command	"CF_FREEZE_%1"[CR]	
%1	"ON" Set Freeze to ON "OFF" Set Freeze to OFF "UP" The same operation as pressing Up key or Left key "DN" The same operation as pressing Down key or Right key	
Details	Set/Cancel Freeze setting. Although projector returns "000", receiving another Freeze command does not release Freeze operation. This command is available in normal Power ON status.	
Doonanaa	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

8.11.5 CF_VMUTE Command

Command	"CF_VMUTE_%1"[CR]	
%1	"OFF" "UP"	
Details	Set/Cancel Blank setting. This command is available in normal Power ON status.	
Bosnonso	Acceptable	"000"[CR]
Response	Unacceptable	"Error Code"[CR]

9. Status Read Command

9.1 Format

1) PC issues commands in format as below:

"CR_Command" [CR]

Command: Character Line

2) When projector receives the appropriate command, it returns a character line as the required data

"000__"%1 [CR]

%1: Required Data (Character Line. See [Basic Status Read Command Table])

3) When the received data cannot be decoded, the projector returns "?"[CR]

9.2 Transfer Example

Get total dots of projector by Expand Commands

PC \rightarrow PJ: "CR_TDOTS" [CR] PC \leftarrow PJ: "000_1344" [CR]

9.3 Operation Condition

- 1) Basically Status Read Commands should be always operated.
- 2) When Eco mode is selected in Standby mode of Setting menu and projector is in Standby, Status Read Commands are invalid.

9.4 Image Status Read Command

9.4.1 CR_BRIGHT Command

Command	"CR_BRIGHT"[CR]	
Details	Get Brightness value of user control	
Response	Acceptable	"000_% a "[CR]
	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.2 CR_CONT Command

Command	"CR_CONT"[CR]	
Details	Get Contrast value of user control	
Response	Acceptable	"000_% a "[CR]
	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.3 CR_COLOR Command

Command	"CR_COLOR"[CR]	
Details	Get Color value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.4 CR_TINT Command

Command	"CR_TINT"[CR]	
Details	Get Tint value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.5 CR_SHARP Command

Command	"CR_SHARP"[CR]	
Details	Get Sharpness value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"015"
	Unacceptable	"Error Code"[CR]

9.4.6 CR_GAMMA Command

Command	"CR_GAMMA"[CR]	
Details	Get Gamma value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"015"
	Unacceptable	"Error Code"[CR]

9.4.7 CR_WBAL - R Command

Command	"CR_WBAL-R"[CR]	
Details	Get White Balance Red value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.8 CR_WBAL - G Command

Command	"CR_WBAL-G"[CR]	
Details	Get White Balance Green value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.9 CR_WBAL - B Command

Command	"CR_WBAL-B"[CR]	
Details	Get White Balance Blue value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code"[CR]

9.4.10 CR_COLTEMP Command

Command	"CR_COLTEMP"[CR]	
Details	Get Color Temp. setting value	
	Acceptable	"000_%a"[CR]
Response	%a	"000" Xlow "001" Low "002" Mid "003" High "BLACK" Blackboard(Green) mode selected "COLOR" Colorboard selected "BLANK" White Balance has been changed
	Unacceptable	"Error Code"[CR]

9.4.11 CR_NZRED Command

Command	"CR_NZRED"[CR]	
Details	Get setting status of Noise Reduction	
Acceptable "000_%1"[CR]		"000_%1"[CR]
Response	%1	"L1" Noise Reduction for moving image "L2" Noise Reduction for still image "OFF" Noise Reduction is OFF
	Unacceptable	"Error Code"[CR]

9.4.12 CR_PROGV Command

Command	"CR_PROGV"[CR]	
Details	Get setting status of Progressive scan	
	Acceptable "000_%a"[CR]	
Response	%a	"L1" Progressive Mode L1 is selected "L2" Progressive Mode L2 is selected "FILM" Progressive Model FILM is selected "OFF" Progressive scan is disabled
	Unacceptable	"Error Code"[CR]

9.4.13 CR_IMAGE Command

Command	"CR_IMAGE"[CR]	
Details	Get image setting status Required data "CUSTOM1" to "CUSTOM4" is the same as "Image1" to "Image4" displayed when selecting IMAGE on OSD menu	
	Acceptable	"000_%a"[CR]
Response	%a	"DYNAMIC"
	Unacceptable	"Error Code"[CR] When the command is invalid due to condition such as Input source

9.4.14 CR_IMGGMD Command

Command	"CR_IMGGMD"[CR]	
Details	Get Image Gamma setting status	
	Acceptable	"000_%a"[CR]
Response	%a	"DYN" Presentation "STD" Standard "REL" High contrast "CNM" Cinema "BKB" Blackboard "CLB" Colorboard
	Unacceptable	"Error Code"[CR]

9.4.15 CR_COLBOARD Command

Command	"CR_COLBOARD_%1"[CR]	
Details	Get Colorboard setting status	
	Acceptable	"000_%a"[CR]
Response	%a	"RED" Select Red "BLUE" Select Blue "YELLOW" Select Yellow "GREEN" Select Green
	Unacceptable	"Error Code"[CR]

9.5 PC Adjust Status Read Command

9.5.1 CR_FSYNC Command

Command	"CR_FSYNC"[CR]	
Details	Get Fine Sync value	
	Acceptable	"000_%a"[CR]
Response	%a	"0000"~"0031"
	Unacceptable	"Error Code"[CR]

9.5.2 CR_TDOTS Command

Command	"CR_TDOTS"[CR]	
Details	Get Total Dots value	
	Acceptable "000_%a"[CR]	
Response	%a	"nnnn"~"mmmm" (nnnn = Display Dots + Horizontal Position) (mmmm= Maximum value depends on input signal)
	Unacceptable	"Error Code"[CR]

9.5.3 CR_CLAMP Command

Command	"CR_CLAMP"[CR]	
Details	Get Clamp value	
	Acceptable "000_%a"[CR]	
Response	%a	"0001"~"nnnn" ("nnnn" depends on input signal)
	Unacceptable	"Error Code"[CR]

9.5.4 CR_H - POS Command

Command	"CR_H - POS"[CR]	
Details	Get Horizontal Position value	
	Acceptable	"000_%a"[CR]
Response	%a	"0000"~"nnnn" (nnnn = Total Dots - Display Dots)
	Unacceptable	"Error Code"[CR]

9.5.5 CR_V – POS Command

Command	"CR_V - POS"[CR]	
Details	Get Vertical Position value	
Acceptable "000_		"000_%a"[CR]
Response	%a	"0000"~"nnnn" (nnnn = Total Line - Display Line)
	Unacceptable	"Error Code"[CR]

9.5.6 CR_DDOTS Command

Command	"CR_DDOTS"[CR]	
Details	Get Display Dots value	
	Acceptable	"000_%a"[CR]
Response	%a	"0256"~"nnnn" (nnnn = Total Dots – Horizontal Position value)
	Unacceptable	"Error Code"[CR]

9.5.7 CR_DLINE Command

Command	"CR_DLINE"[CR]	
Details	Get Display Line value	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"0100"~"nnnn" (nnnn = Total Line – Vertical Position value)
	Unacceptable	"Error Code"[CR]

9.5.8 CR_PCSTORE Command

Command	"CR_PCSTORE"[CR]	
Details	Get Free/Stored status of MODE1 - MODE5 for PC Adjust. Each data consists of 10 bytes. Each byte indicates the status of MODE1~MODE10 respectively. (F:Free S:Stored)	
	Acceptable	"000_%a"[CR]
Response	%a	"FFFFFFFF" All Free "SFFFFFFFF" MODE1 is Stored, others are Free : "FFFFFFFS" MODE5 is Stored, others are Free "SSSSSSSSS" All Stored
	Unacceptable	"Error Code"[CR]

9.6 Video Status Read Command

9.6.1 CR_SERSYS Command

Command	"CR_SERSYS"[CR]	
Details	Get currently selected signal Returns auto-detected signal in Auto mode Only available for Video input. (N/A when Input is computer)	
	Acceptable	"000_%a"[CR]
Response	%a	"1080I60" 1080i 60Hz "1080I50" 1080i 50Hz "1035I" 1035i "720P" 720p "575P" 575p "480P" 480p "575I" 575i (includes Composite signal such as PAL) "480I" 480i (includes Composite signal such as NTSC) "NO_SIGNAL" There is no signal
	Unacceptable	"Error Code"[CR]

9.7 Input Status Read Command

9.7.1 CR_INPUT Command

Command	"CR_INPUT"[CR]	
Details	Get selected INPUT No.	
	Acceptable	"000_%1"[CR]
Response	Request data	"1"-"3"
	Unacceptable	"Error Code"[CR]

9.7.2 CR_SOURCE Command

Command	"CR_SOURCE"[CR]		
Details	Get selected Source		
	Acceptable	Acceptable "000_%1"[CR]	
Response	Request data	"ANALOG" Analog (RGB) Input is selected "SCART" SCART is selected "VIDEO" Video Input is selected "S-VIDEO" S-Video Input is selected "YPBPR" Component Input is selected	
	Unacceptable	"Error Code"[CR]	

9.7.3 CR_SRCINP1 Command

Command	"CR_SRCINP1" [CR]		
Details	Get selected source of Input 1_CMP1		
	Acceptable	"000_%1"[CR]	
Response	Request data	"ANALOG" Analog RGB Input is selected "YPBPR" YPBPR Input is selected "SCART" Scart Input is selected	
	Unacceptable	"Error Code"[CR]	

9.7.4 CR_SRCINP2 Command

Command	"CR_SRCINP2" [CR]		
Details	Get selected source of Input 2_CMP2		
Response	Acceptable	"000_%1"[CR]	
	Request data	"ANALOG" Analog RGB Input is selected "OUT" Monitor out is selected	
	Unacceptable	"Error Code"[CR]	

9.7.5 CR_SRCINP3 Command

Command	"CR_SRCINP3" [CR]		
Details	Get selected source of Input 3_Video		
Response	Acceptable	"000_%1"[CR]	
	Request data	"VIDEO" Composite Video Input is selected	
	Unacceptable	"Error Code"[CR]	

9.7.6 CR_SRCINP4 Command

Command	"CR_SRCINP4" [CR]		
Details	Get selected source of Input 4_S-video		
Response	Acceptable	"000_%1"[CR]	
	Request data	"S-VIDEO" S-video Input is selected	
	Unacceptable	"Error Code"[CR]	

9.7.7 CR_SYSTEM Command

Command	"CR_S	YSTEM"[CR]	
Details	Get sel	ected System	
	Acceptable		"000_%1"[CR]
		Input is PC Analog	"VGA1"
Response	%1	Input is Y,Pb/Cb,Pr /Cr	"AUTO" Auto is selected "1080i" 1080i is selected "1035i" 1035i is selected "720p" 720p is selected "575p" 575p is selected "480p" 480p is selected "575i" 575i is selected "480i" 480i is selected Projector returns selected System status regardless of the signal input.
		Input is Video,S-Vi deo	"AUTO" Auto is selected "NTSC" NTSC is selected "NTSC443" NTSC4.43 is selected "PAL" PAL is selected "SECAM" SECAM is selected "PAL – M" PAL-M is selected "PAL – N" AL-N is selected Projector returns selected System status regardless of the signal input.
	Unacceptable		""Error Code"[CR]

9.7.8 CR_SYSLIST Command

Command	"CR_SYSLIST"[CR]		
Details	Get selectable System titles		
	Acceptable	"000_%1_%2%x" [CR]	
Response	%1	- When Input is PC-Analog "XGA1"	
	Unacceptable	""Error Code"[CR]	

9.7.9 CR_MODELIST Command

Command	"CR_MODELIST"[CR]	
Details	Get selectable Mode titles	
	Acceptable	"000_%1_%2%x" [CR]
Response	%1 %2 : %x	Returns Error code "101" when Input is other than PC-Analog Returns Error code "101" when Input is PC-Analog but no signal When Input is PC-Analog and signal is found, returns selectable Mode among Mode1 – 10 "MODE1" : "MODE10
	Unacceptable	"Error Code"[CR]

9.8 Screen Status Read Command

9.8.1 CR_SCREEN Command

Command	"CR_SCREEN"[CR]		
Details	Get selected on-screen Aspect mode (screen size)		
	Acce	ptable	"000_%a"[CR]
Response	%a	Input is PC	"NORMAL" Normal mode is selected "FULL" Full mode is selected "WIDE" 16:9 mode is selected "ZOOM" Zoom mode is selected "TRUE" True mode is selected When the screen is set to D.Zoom, projector returns the previous status (NORMAL) "CUSTOM" Custom mode is selected
		Input is Video	"NORMAL" Normal mode is selected "FULL" Full mode is selected "WIDE" 16:9 mode is selected "ZOOM" Zoom mode is selected "CUSTOM" Custom mode is selected
	Unacceptable		"Error Code"[CR]

9.8.2 CR_VSCALE Command

Command	"CR_VSCALE"[CR]		
Details	Get setting status of Vertical Scale Store Mode		
	Acceptable	"000_%1[CR]	
Response	%1	"-32" ~ "032"	
	Unacceptable	"Error Code"[CR]	

9.8.3 CR_VPOS Command

Command	"CR_VPOS"[CR]		
Details	Get setting status of Vertical Position Store Mode		
Response	Acceptable	"000_%1"[CR]	
	%1	"-15" ~ "015"	
	Unacceptable	"Error Code"[CR]	

9.8.4 CR_HSCALE Command

Command	"CR_HSCALE"[CR]		
Details	Get setting status of Horizontal Scale Store Mode		
Response	Acceptable	"000_%1"[CR]	
	%1	"-32" ~ "032"	
	Unacceptable	"Error Code"[CR]	

9.8.5 CR_HPOS Command

Command	"CR_HPOS"[CR]		
Details	Get setting status of Horizontal Position Store Mode		
Response	Acceptable	"000_%1"[CR]	
	%1	"-15" ~ "015"	
	Unacceptable	"Error Code"[CR]	

9.8.6 CR_ KYSTNMODE Command

Command	"CR_KYSTNMODE"[CR]	
Details	Get setting status of Keystone Store Mode	
Response	Acceptable	"000_%a"[CR]
	%a	"STR" Store mode is "Store" "RST" Store mode is "Reset"
	Unacceptable	"Error Code"[CR]

9.8.7 CR_CEIL Command

Command	"CR_CEIL" [CR]	
Details	Get setting status of Ceiling	
Response	Acceptable	"000_%1"[CR]
	%1	"ON" Ceiling is ON "OFF" Ceiling is OFF
	Unacceptable	"Error Code" [CR]

9.8.8 CR_REAR Command

Command	"CR_REAR" [CR]	
Details	Get setting status of Rear	
Response	Acceptable	"000_%1"[CR]
	%1	"ON" Rear is ON "OFF" Rear is OFF
	Unacceptable	"Error Code" [CR]

9.9 Lamp Status Read Command

9.9.1 CR_LAMPREPL Command

Command	"CR_LAMPREPL"[CR]		
Details	Get information	Get information of Lamp Replacement time	
	Acceptable	"000_%1"[CR]	
Response	%1	"1Y" Over lamp replacement time "1N" Within lamp replacement time "1" means the number of lamps. (1 lamp model→ "1") "Y"/"N" means if it has reached its replacement time or not. e.g. "1Y"projector is 1 lamp model and Lamp is over its replacement time	
	Unacceptable	"Error Code"[CR]	

9.9.2 CR_LAMPH Command

Command	"CR_LAMPH"[CR]	
Details	Get total running time of lamp by hour (h) *Actual running time, not corresponding value	
	Acceptable	"000_%1"[CR]
Response	%1	"00000"~"99999"
	Unacceptable	"Error Code"[CR]

9.9.3 CR_LAMPCORRESPH Command

Command	"CR_LAMPCORRESPH"[CR]	
Details	Get total running time of lamp by hour (h) * Corresponding value, not actual running time	
	Acceptable	"000_%1"[CR]
Response	%1	"00000"~"99999"
	Unacceptable	"Error Code"[CR]

9.9.4 CR_LAMPMODE Command

Command	"CR_LAMPMODE"[CR]	
Details	Get setting status of Lamp Mode	
	Acceptable	"000_%1"[CR]
Response	%1	"AUTO" Lamp Mode is Auto "NORMAL" Lamp Mode is Normal "ECO1" Lamp Mode is Eco1 "ECO2" Lamp Mode is Eco2
	Unacceptable	"Error Code"[CR]

9.9.5 CR_LAMPMSTS Command

Command	"CR_LAMPSTS"[CR]	
Details	Get Lighting sta	atus of lamp
	Acceptable	"000_%1"[CR]
Response	%1	 "n****" A number of * should be among 1-4. First character shows how many lamps are incorporated in projector. (1,2 or 4) Second character shows following status in order of lamp number. "I" Lamp is ON "O" Lamp is OFF "X" Lamp failure e.g. "1I" · · · · · · · 1 lamp model and Lamp is ON "2IO · · · · · · 2 lamps model and No.1 Lamp is ON and No.2Lamp is OFF "4IOXI" · · · · 4 lamps model and No.1,No.4 lamps are ON. No.2 lamp is OFF and No.3 model is failed.
	Unacceptable	"Error Code"[CR]

9.9.6 CR_PROJH Command

Command	"CR_PROJH"[CR]	
Details	Get total running time of Projector by hour (h)	
	Acceptable	"000_%1"[CR]
Response	%1	"0000000"~"0099999"
	Unacceptable	"Error Code"[CR]

9.9.7 CR_HMLAMP Command

Command	"CR_HMLAMP"[CR]	
Details	Get lamp number.	
	Acceptable	"000_%1"[CR]
Response	%1	"001"
	Unacceptable	"Error Code" [CR]

9.9.8 CR_ LAMPLIFECONTRL Command

Command	"CR_LAMPLIFECONTRL" [CR]	
Details	Get setting status of Lamp life control	
Response	Acceptable	"000_%1"[CR]
	%1	"MODE1" Lamp life control is Mode1 status "MODE2" Lamp life control is Mode2 status
	Unacceptable	"Error Code" [CR]

9.10 Sound Status Read Command

9.10.1 CR_VOLUME Command

Command	"CR_VOLUME"[CR]	
Details	Get Volume value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000"~"063"
	Unacceptable	"Error Code" [CR]

9.10.2 CR_MUTE Command

Command	"CR_MUTE"[CR]	
Details	Get sound mute setting status	
	Acceptable	"000_%a"[CR]
Response	%a	"ON" Sound Mute is ON "OFF" Sound Mute is OFF
	Unacceptable	"Error Code" [CR]

9.10.3 CR_MIC Command

Command	"CR_MIC"[CR]	
Details	Get setting status of MIC	
Acceptable "000_%1"[CR]		"000_%1"[CR]
Response	%1	"ON" MIC is ON "OFF" MIC is OFF
	Unacceptable	"Error Code" [CR]

9.10.4 CR_MICGAIN Command

Command	"CR_MICGAIN"[CR]	
Details	Get MIC GAIN value of user control	
	Acceptable	"000_%a"[CR]
Response	%a	"000" ~ "063"
	Unacceptable	"Error Code" [CR]

9.10.5 CR_STANDBYMICOUT Command

Command	"CR_STANDBYMICOUT"[CR]	
Details	Get setting status of STANDBY MIC OUT	
Acceptable "000_%1"[CR]		"000_%1"[CR]
Response	%1	"ON" STANDBY MIC OUT is ON "OFF" STANDBY MIC OUT is OFF
	Unacceptable	"Error Code" [CR]

9.11 Setting Status Read Command

9.11.1 CR_LANG Command

Command	"CR_LANG"[CI	RJ
Details	Get selected la	nguage
	Acceptable	"000_%a"[CR]
Response	%a	"ENG"
	Unacceptable	"Error Code"[CR]

9.11.2 CR_INPUTSEARCH Command

Command	"CR_INPUTSEARCH"[CR]	
Details	Get setting status of Auto input	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"OFF" Auto input is OFF "ON1" Auto input is On1 "ON2" Auto input is On2
	Unacceptable	"Error Code"[CR]

9.11.3 CR_AUTOSETUPPCADJ Command

Command	"CR_AUTOSETUPPCADJ" [CR]	
Details	Get Auto PC setting status in Auto setup	
	Acceptable	"000_%a"[CR]
Response	%a	"ON" Auto PC in Auto setup is ON "OFF" Auto PC in Auto setup is OFF
	Unacceptable	"Error Code"[CR]

9.11.4 CR_AUTOSETUPKEYSTONE Command

Command	"CR_AUTOSETUPKEYSTONE" [CR]	
Details	Get Keystone setting status in Auto setup	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"AUTO" Auto Keystone is Auto "MANUAL" Auto Keystone is Manual "OFF" Auto Keystone is OFF
	Unacceptable	"Error Code"[CR]

9.11.5 CR_BACKGND Command

Command	"CR_BACKGND" [CR]	
Details	Get setting status of Screen for no signal	
	Acceptable	"000_%1" [CR]
Response	%1	"BLUE" Blue Back is selected "USER" User is selected "BLACK" Black Back is selected
	Unacceptable	"Error Code" [CR]

9.11.6 CR_DISP Command

Command	"CR_DISP"[CR]	
Details	Get setting status of Display	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"ON" Display is ON "OFF" Display is OFF "CNTDWNOFF" Countdown OFF
	Unacceptable	"Error Code" [CR]

9.11.7 CR_LOGO Command

Command	"CR_LOGO"[CR]	
Details	Get setting status of Logo	
Acceptable "000_%1"[CR]		"000_%1"[CR]
Response	%1	"OFF" Logo function is OFF "DFLT" Default Logo is selected "USER" User Logo is selected
	Unacceptable	"Error Code" [CR]

9.11.8 CR_TERMINAL Command

Command	"CR_TERMINAL" [CR]	
Details	Get setting status of Terminal	
Response	Acceptable	"000_%a"[CR]
	%a	"COMPUTER"Computer Input mode "MONITOR"Monitor Out mode
	Unacceptable	"Error Code" [CR]

9.11.9 CR_P-MANE Command

Command	"CR_P-MANE"[CR]	
Details	Get Power management mode setting status	
Response	Acceptable	"000_%a"[CR]
	%a	"OFF" Power management mode is OFF "READY" Power management mode is Standby "SHUTDOWN" Power management mode is set to Exit
	Unacceptable	"Error Code" [CR]

9.11.10 CR_P-MANETIME Command

Command	"CR_P-MANETIME"[CR]	
Details	Get time to start Power management mode	
Response	Acceptable	"000_%a"[CR]
	%a	"001"~"030"1 minute to 30 minutes
	Unacceptable	"Error Code" [CR]

9.11.11 CR_ON-STA Command

Command	"CR_ON-STA"[CR]	
Details	Get Direct power on setting status	
Response	Acceptable	"000_%a"[CR]
	%a	"ON" Direct power on is ON "OFF" Direct power on is OFF
	Unacceptable	"Error Code" [CR]

9.11.12CR_STANDBYMODE Command

Command	"CR_STANDBYMODE" [CR]	
Details	Get Standby Mode setting status	
Response	Acceptable	"000_%a"[CR]
	%a	"ECO" Eco Mode "NORMAL" Normal Mode
	Unacceptable	"Error Code" [CR]

9.11.13 CR_PTIMEMODE Command

Command	"CR_PTIMEMODE"[CR]	
Details	Get operation mode of P-timer.	
Response	Acceptable	"000_%a"[CR]
	%a	"COUNTUP" Count up is selected "COUNTDN" Count down is selected.
	Unacceptable	"Error code"[CR]

9.11.14 CR_PTIMER Command

Command	"CR_PTIMER"[CR]	
Details	Get current status of P-timer	
	Acceptable	"000_%a"[CR]
Response	%a	"ON" P-timer is in execution "STOP" P-timer is paused "OFF" P-timer is inactive
	Unacceptable	"Error code"[CR]

9.11.15 CR_PTIME Command

Command	"CR_PTIME"[CR]	
Details	Get setting status of Countdown timer.	
Response	Acceptable	"000_%a"[CR]
	%a	"001"~"180"1~180 minutes
	Unacceptable	"Error code"[CR]

9.11.16 CR_CCAPTIONDISP Command

Command	"CR_CCAPTIONDISP"[CR]	
Details	Get selected channel of Closed caption	
Response	Acceptable	"000_%a"[CR]
	%a	"OFF" Off "CC1" CC1 is selected "CC2" CC2 is selected "CC3" CC3 is selected "CC4" CC4 is selected
	Unacceptable	"Error Code"[CR]

9.11.17 CR_CCAPTIONCOLOR Command

Command	"CR_CCAPTIONCOLOR_%1"[CR]	
Details	Get selected color of Closed caption	
	Acceptable	"000"[CR]
Response	%a	"COLOR" Color is selected "WHITE" White is selected
	Unacceptable	"Error Code"[CR]

9.11.18 CR_RCODE Command

Command	"CR_RCODE"[CR]	
Details	Get selected Remote Control Code	
Response	Acceptable	"000_%a"[CR]
	%a	"001" Code1 is selected "002" Code2 is selected
	Unacceptable	"Error Code" [CR]

9.11.19 CR_SECURITY Command

Command	"CR_SECURITY" [CR]	
Details	Get Security Mode setting status	
Response	Acceptable	"000_%1[CR]
	%1	"ON"PJ Lock setting on Menu is ON-1 or ON-2 "OFF"PJ Lock setting on Menu is OFF
	Unacceptable	"Error Code" [CR]

9.11.20 CR_KEYDIS Command

Command	"CR_KEYDIS"(CR)	
Details	Get disability status of RC/Projector keys (valid or invalid)	
Response	Acceptable	"000_%a"[CR]
	%a	"NONE" RC / Projector keys are valid "RC" RC keys are invalid "KEY" Projector keys are invalid
	Unacceptable	"Error Code" [CR]

9.11.21 CR_PJLOCKNOW Command

Command	"CR_PJLOCKNOW" [CR]	
Details	Get if PJ lock is	s actually in operation
	Acceptable	"000_%1[CR]
Response	%1	"LOCK"
	Unacceptable	"Error Code" [CR]

9.11.22 CR_PJLOCKMENU Command

Command	"CR_PJLOCKMENU" [CR]	
Details	Get status of PJ Lock on Menu	
	Acceptable	"000_%1[CR]
Response	%1	"ON1" PJ Lock status is On-1 "ON2" PJ Lock status is On-2 "OFF" PJ Lock status is OFF
	Unacceptable	"Error Code" [CR]

9.11.23 CR_FANMODE Command

Command	"CR_FANMODE"[CR]	
Details	Get selected Fan mode	
Response	Acceptable	"000_%a"[CR]
	%a	"L1" Fan mode is L1 "L2" Fan mode is L2
	Unacceptable	"Error Code" [CR]

9.11.24CR_FANCONTROL Command

Command	"CR_FANCONTROL"[CR]	
Details	Get selected Fan control setting status	
	Acceptable	"000_%a"[CR]
Response	%a	"OFF" Fan control is OFF "ON1" Fan control is ON1 "ON2" Fan control is ON2
	Unacceptable	"Error Code" [CR]

9.11.25 CR_ DELAYCTRL Command

Command	"CR_DELAYCTRL"[CR]	
Details	Get setting status of Video delay control	
Response	Acceptable	"000_%1"[CR]
	%1	"ON" Video delay control is active "OFF" Video delay control is inactive
	Unacceptable	"Error Code"[CR]

9.11.26 CR_FILH Command

Command	"CR_FILH"[CR]	
Details	Get Filter used time	
	Acceptable	"000_%1"[CR]
Response	%1	"00000"~"99999" 0 hour to 99999 hours
	Unacceptable	"Error Code"[CR]

9.11.27 CR_FILREPL Command

Command	"CR_FILREPL"[CR]	
Details	Get the information of Filter replacement time	
	Acceptable	"000_%1"[CR]
Response	%1	"1Y" Over filter replacement time "1N" Within filter replacement time
	Unacceptable	"Error Code"[CR]

9.11.28 CR_FILTIMER Command

Command	"CR_FILTIMER" [CR]		
Details	Get setting time	Get setting time which filter warning OSD is displayed	
	Acceptable	"000_%1"[CR]	
Response	%1	"1000" 1000 hours "2000" 2000 hours "3000" 3000 hours "4000" 4000 hours "5000" 5000 hours "6000" 6000 hours "OFF" No OSD display	
	Unacceptable	"Error Code"[CR]	

9.11.29 CR_TTLPWRSAVEKWH Command

Command	"CR_TTLPWRSAVEKWH"[CR]	
Details	Get current value of Total power savings (kWh)	
	Acceptable	"000_%1"[CR]
Response	%1	"00000.00"~"99999.99"
	Unacceptable	"Error Code"[CR]

9.11.30 CR_TTLPWRSAVECO2 Command

Command	"CR_TTLPWRSAVECO2"[CR]	
Details	Get current value of Total power savings (CO2)	
Response	Acceptable	"000_%1"[CR]
	%1	"00000.00"~"99999.99"
	Unacceptable	"Error Code"[CR]

9.12 Other Status Read Command

9.12.1 CR_STATUS Command

Command	"CR_STATUS"(CR)	
Details	Get status of Projector behavior. This command affects the same as "CR0" of Basic Serial command, but this has an error code.	
	Acceptable	"000_%1"[CR]
Response	%1	"00"= Power ON "80"= Stand by "40"= Count down "20"= Cooling down "10"= Power failure "28"= Cooling down due to abnormal temperature "88"= Stand by after Cooling down "24"= Power saving cooling down "04"= Power saving "21"= Cooling down due to Lamp failure "81"= Stand by after Cooling down due to Lamp failure
	Unacceptable	"Error Code"[CR]

9.12.2 CR_SIGNAL Command

Command	"CR_SIGNAL"(CR)	
Details	Get Signal status if there is signal or not	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"ON" Signal is found "OFF" There is no signal
	Unacceptable	"Error Code" [CR]

9.12.3 CR_VMUTE Command

Command	"CR_VMUTE"[CR]	
Details	Get setting status of Blank	
Response	Acceptable	"000_%a"[CR]
	%a	"ON" Blank is ON, User Logo (My picture) is displayed "OFF" Blank is OFF
	Unacceptable	"Error Code" [CR]

9.12.4 CR_FREEZE Command

Command	"CR_FREEZE"[CR]	
Details	Get setting status of Freeze	
Acceptable "000_%a"[CR]		"000_%a"[CR]
Response	%a	"ON" Freeze is ON "OFF" Freeze is OFF
	Unacceptable	"Error Code" [CR]

9.12.5 CR_TEMPWARN Command

Command	"CR_TEMPWARN"[CR]	
Details	Get the temperature inside a projector and its condition if it is abnormal temperature or close to abnormal temperature If there are several sensors installed, it is possible to get information from all the sensors at once.	
	Acceptable	"000_%a_%b_%c"[CR]
Response	%a %b %c	%a
	Unacceptable	"Error Code" [CR]

9.12.6 CR_TEMP Command

Command	"CR_TEMP"[CI	"CR_TEMP"[CR]	
Details	Get current temperature inside a projector. If there are several sensors installed, it is possible to get information from all the sensors at once.		
	Acceptable	"000_%1_%2_%3"[CR]	
		%1= Sensor 1 temperature (Outside temperature) %2= Sensor 2 temperature (Inside temperature1) %3= Sensor 3 temperature (Inside temperature2)	
		%1,%2 are consists of 6 bites fixed There must be 1 space between %1 and %2, and, %2 and %3	
		e.g31.5F	
Response	%1,%2,%3	"_" means a space and "_" changes into "-", when temperature gets below freezing.	
		e.g05.5F	
		The last character shows if corresponding sensor is under abnormal temperature.	
		 "F" Abnormal temperature "W" Close to abnormal temperature(Temperature is as high to display Warning) "S"Not close to abnormal temperature (Temperature is low enough and safe.) "N" Applicable sensor does not detect abnormal temperature "E"Not able to return temperature data 	
		When several sensors are incorporated, projector returns values continuously. e.g. "_31.5F35.2S38.0W"[CR]	
		A data of sensor 1 comes first and a data of sensor 2 follows after 1 space.	
		As described respectively in e.g., sensor 1 detects abnormal temp., sensor 2 detects 35.2 degrees which means safety, and sensor 3 is 38 degrees which is close to abnormal temp. In case projector cannot return its data due to some hard ware failure, the last character becomes "E" such as "_00.0E".	
		Some of the projectors get abnormal temperature because of heat of Lamp ballast in Standby mode or Powering ON. Therefore detection of abnormal temperature is suspended while Standby mode or adequate time after Power ON, and during that time projector returns "N" as a temperature data.	
	Unacceptable	"Error Code"[CR]	

9.12.7 CR_TEMPFAIL Command

Command	"CR_TEMPFAIL"[CR]	
Details	Get the temperature inside a projector when abnormal temperature occurs. If there are several sensors installed, it is possible to get information from all the sensors at once.	
	Acceptable	"000_%a_%b_%c"[CR]
Response	%a %b %c	%aSensor 1 temp. (External temp.) %bSensor 2 temp. (Internal temp.1) %cSensor 3 temp. (Internal temp.2) [Example] "_31.5F"[CR] "_" indicates a space. When the temperature sinks to -, the first character is "-" like "-05.5F"[CR] The last character means the sensor's status if it reaches abnormal temperature Exceeding critical temp
	Unacceptable	"Error Code" [CR]

9.12.8 CR_SERIALNO Command

Command	"CR_SERIALNO" [CR]	
Details	Get value of the serial number.	
	Acceptable	"000_%1" [CR]
Response	%1	Eight digits of alphanumeric characters
	Unacceptable	"Error Code" [CR]